

# Portable Power Steam Cleaner

## Owner's Guide

---



**KEEP YOUR RECEIPT FOR WARRANTY PURPOSES**

Please read all instructions before use.

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING:** To reduce the risk of fire, electrical shock, or injury, the following basic safety precautions should always be followed when using an electrical appliance.

## READ ALL INSTRUCTIONS BEFORE USE

1. The Portable Power Steam Cleaner Water Tank is designed to hold a maximum of 42 oz. (1,242 ml.) of water. Unplug electrical cord before filling with water.
2. DO NOT leave your Portable Power Steam Cleaner unattended when plugged in or not in use. Use only for its intended purpose as indicated in this manual.
3. This unit is not a toy. Close supervision is required when using unit near children, pets, and plants. Steam produced by unit is hot and pressurized. Care must be taken to avoid burns or other injuries. Never point nozzle at people or pets.
4. To reduce the risk of contact with hot water emitting from steam vents, hold appliance away from body and check for signs of condensation or leakage.
5. DO NOT use this unit if electrical cord or outlet is damaged. DO NOT use unit if it is not working properly or has been dropped, damaged or left outdoors. If such damage occurs, DO NOT disassemble or attempt repairs, take unit to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electrical shock, or injury to persons when steam cleaner is used.
6. To reduce risk of electrical shock, DO NOT immerse in water or other liquids. DO NOT use electrical cord as a handle. DO NOT allow cord to be crimped by closing it in doors. DO NOT pull or stretch cord around sharp corners or edges.
7. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
8. DO NOT use this unit with extension cords or electrical outlets that have inadequate current capacity. A three-prong outlet or a properly grounded adapter is necessary when using Portable Power Steam Cleaner.
9. In order to unplug Portable Power Steam Cleaner, grasp plug and pull smoothly and firmly from outlet. DO NOT attempt to unplug unit by pulling or tugging on cord.
10. Use caution, as burns could occur from touching hot metal parts, hot water or steam.

# IMPORTANT SAFETY INSTRUCTIONS

---



**WARNING:** To reduce the risk of electrical shock, this appliance has a three-pronged plug. This plug will fit in a polarized wall outlet only one way. If the plug does not fit fully in the outlet, contact a licensed electrician to install a proper outlet. DO NOT attempt to modify the plug or defeat this safety feature.

11. The Portable Power Steam Cleaner is only meant to be used with recommended Portable Power Steam Cleaner accessories. Other types of attachments are not to be used with the Portable Power Steam Cleaner. Doing so may cause injuries or damage to unit.
12. Attachments become hot during use. To avoid injuries, DO NOT touch attachments while using this appliance. DO NOT attempt to change attachments while unit is emitting steam.
13. When filling your Portable Power Steam Cleaner, only water should be used in unit. Other cleaning agents will damage unit and can cause injuries.
14. DO NOT operate unit if steam opening is blocked. Should this occur, immediately cease usage and unplug from electrical outlet.
15. Store your Portable Power Steam Cleaner in a cool, dry place.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

---

## Questions or comments?

- [www.mccullochsteam.com](http://www.mccullochsteam.com)
- [consumerservice@mccullochsteam.com](mailto:consumerservice@mccullochsteam.com)
- 1-800-711-6617

These features and accessories are included with your Portable Power Steam Cleaner. To obtain additional parts, refer to Product Support on Page 16 of this manual.

## UNIT FEATURES

- |    |                                 |
|----|---------------------------------|
| 1  | 4' Steam Hose                   |
| 2  | Water Tank Cap                  |
| 3  | Cord Wrap                       |
| 4  | On/Off Switch                   |
| 5  | Steam Indicator Light           |
| 6  | Steam Nozzle                    |
| 7  | Steam Trigger Lock              |
| 8  | Steam Trigger                   |
| 9  | Steam Adjustment Knob           |
| 10 | Water Treatment Cartridge Cover |



 
- The *4' Steam Hose (1)* safely channels the flow of steam from the Water Reservoir to the Steam Nozzle.
- The *Water Tank Cap (2)* must be unscrewed and removed in order to fill the Water Reservoir with water.
- The *Cord Wrap (3)* neatly stores the Power Cord.
- The *On/Off Switch (4)* provides power to the unit.
- The *Steam Indicator Light (5)* illuminates green once steamer is ready for use.
- The *Steam Nozzle (6)* emits a flow of hot, penetrating steam whenever the Steam Trigger is pressed and held.
- The *Steam Trigger Lock (7)* locks Steam Trigger to "On" position for continuous steam.
- The *Steam Trigger (8)* is pressed and held in order to start the flow of steam from the Steam Nozzle, then released when you wish to stop.
- The *Steam Adjustment Knob (9)* is conveniently located on the handle to adjust the intensity of the steam at your fingertips.
- The *Water Treatment Cartridge Cover (10)* The Water Treatment Cartridge Cover is removed to replace the Water Treatment Cartridge.

## ACCESSORIES

- 1 5.5" Jet Nozzle
- 2 Triangle Brush
- 3 Large Brush
- 4 2 - 1.5" Nylon Utility Brushes
- 5 1.5" Brass Utility Brush
- 6 Water Treatment Cartridge
- 7 3" Scraper
- 8 9" Squeegee
- 9 Storage Bag
- 10 Fill Cup
- 11 Removable Backpack
- 12 2.5" Round Brush
- 13 2 - 2.5" Round Scrub Pads



5.5" Jet Nozzle  
A1230-001

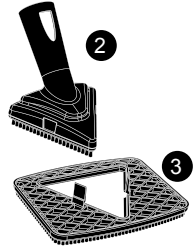

4" Triangle Brush  
A1230-002

6" x 4.5" Large  
Brush  
A1230-003



1.5" Nylon Utility  
Brushes  
A1230-005



1.5" Brass Utility  
Brush  
A1230-006



Water Treatment Cartridge  
A1350-004



3" Scraper  
A1230-009



9" Squeegee  
A1350-002



 
Removable Backpack  
A1350-003




Storage Bag  
A1230-010



2.5" Round Brush  
A1350-001

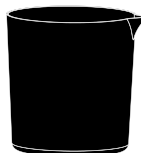

Fill Cup  
A275-015

 

2.5" Round Scrub Pads  
A1230-007




- The *5.5" Jet Nozzle* (1) focuses the flow of steam from the Steam Nozzle, and serves as the base to which the Utility Brushes, Round Brush and Scrub Pad connect.
- The *Triangle Brush* (2) connects to the Steam Nozzle, and is designed for cleaning corners and other difficult angles.
- The *Large Brush* (3) attaches to the Triangle Brush to cover large surfaces.
- The *1.5" Nylon Utility Brush* (4) connects to the Jet Nozzle, providing extra scrubbing power for removing exceptionally tough dirt and stains.
- The *1.5" Brass Utility Brush* (5) connects to the Jet Nozzle and is designed for removing tough stuck-on grease and grime from durable surfaces such as ovens and grills.
- The *Water Treatment Cartridge* (6) is inserted into the unit and removes impurities from water to prolong the life of the unit.
- The *3" Scraper* (7) attaches to the Jet Nozzle to scrape off stuck on grime.
- The *9" Squeegee* (8) attaches to Steam Nozzle to remove bugs from windshield or windows or soap scum from showers.
- The *Storage Bag* (9) stores all attachments neatly on one convenient bag.
- The *Fill Cup* (10) is used to fill Water Reservoir without spills.
- The *Removable Backpack* (11) allows for hands free cleaning.
- The *2.5" Round Brush* (12) connects to the Jet Nozzle to scrub especially tough stains. The Round Brush functions similar to the Nylon Utility Brush, only designed to more efficiently scrub larger surface areas.
- The *2.5" Round Scrub Pad* (13) connects to the Jet Nozzle and is designed to scrub tough dirt and scuffs from surfaces.

## STEAM CLEANING ACCESSORIES

 **WARNING:** Do not connect accessories while unit is emitting steam.

### JET NOZZLE / SCRAPER / SQUEEGEE / TRIANGLE BRUSH


1. Select one of the four accessories (Jet Nozzle shown as example) and push onto the Steam Nozzle (A).
2. Rotate accessory until the yellow lock/release button snaps into the accessory hole (B).

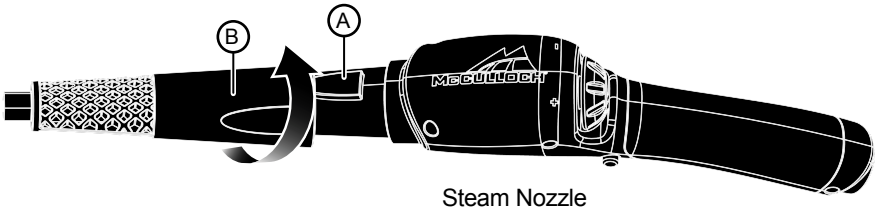

### UTILITY BRUSHES / SCRUB PAD

**NOTE:** Accessories connect to the Jet Nozzle, not the Steam nozzle.

 1. Firmly press Accessory onto tip of Jet Nozzle. Press it on as far as possible to prevent steam leakage.
2. To remove Accessory, simply grip it firmly and pull it off Jet Nozzle.

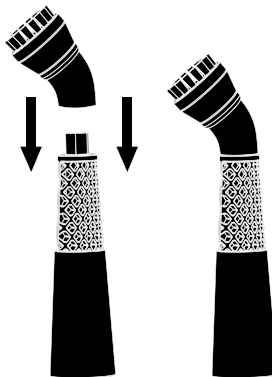




## LARGE BRUSH

**NOTE: Large Brush connects to the Triangle Brush, not the Jet Nozzle.**

 
1. Place Large Brush over the Triangle Brush, and firmly press it on to the Triangle Brush until it snaps into place.
2. To remove Large Brush, simply grip it firmly and pull it off of the Triangle Brush.

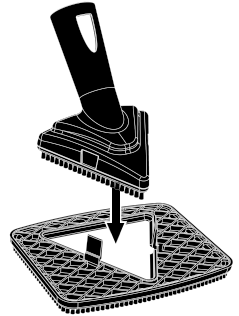

## REMOVABLE BACKPACK

**NOTE: You will need a phillips head screwdriver.**

 1. The Backpack connects to the main body of the unit with 4 phillips head screws.

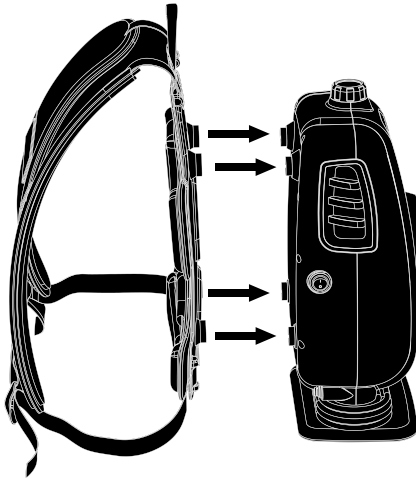

## ORDERING ACCESSORIES & PARTS

Replacement accessories and parts for your Portable Power Steam Cleaner (model MC1350) may be ordered through our Website:

[www.mccullochsteam.com](http://www.mccullochsteam.com)

You may also contact Consumer Service directly:  
[consumerservice@mccullochsteam.com](mailto:consumerservice@mccullochsteam.com) or 1-800-711-6617

## INSTALLING WATER TREATMENT CARTRIDGE

1. The Water Treatment Cartridge is located at the lower front of the Portable Power Steam Cleaner.

**NOTE: The Water Treatment Cartridge must be installed for the Portable Power Steam Cleaner to function.**

2. Insert Water Treatment Cartridge into the unit. Lift Water Treatment Cartridge Cover and line up the two holes on the Water Treatment Cartridge with the corresponding posts on the Portable Power Steam Cleaner. Insert Cartridge and reinstall Water Treatment Cartridge Cover.

**NOTE: Many factors affect the frequency in which the Water Treatment Cartridge will need to be replaced - including amount of use and water hardness. For heavy use, we recommend replacing it approximately every 2 months. For lighter use, replace every 3-4 months. The Water Treatment Cartridge will need to be replaced earlier if you notice reduced steam output.**

 
Jet Nozzle	Dirt, Grease, Grime, Cracks and Crevices, Golf Clubs, Tread of Running Shoes
Triangle Brush	Corners on Countertops, Bathtubs, Floors
Large Brush	Floors, Grout
Scraper	Baked on Food, Grime, Grease, Stove Tops, Ovens
Round Scrub Pad	Countertops, Bathtubs, Sinks, Refrigerators, Ovens, Slate
Nylon Utility Brush and Round Brush	Ovens, Stove Tops, Faucet Fixtures, Microwaves, Sports Equipment, Tile, Grout, Refrigerators, Toys, Door Knobs, Showers, Bathtubs, Changing Tables
Brass Utility Brush	BBQ Grills, Oven Wire Racks
Squeegee with Scrubbing Brush	Bugs on Windshield or Windows, Soap Scum, Grime, Shower Glass Doors, Mirrors, Glass

**NOTE:** Before cleaning electrical appliances, check and follow appliance manufacturer's cleaning guidelines. Never apply to electrical parts.

**NOTE:** Some delicate surfaces, such as painted wood or stainless steel may be scratched or damaged by the bristle of the brushes, especially the Brass Utility Brush. Use careful judgment when deciding what surface to clean with any of the brushes. If you are unsure if a surface will be damaged, it is recommended that you test a small inconspicuous spot before proceeding.

## FILLING WATER RESERVOIR

1. Place Portable Power Steam Cleaner on a flat, level surface.
2. Lay unit on its back.

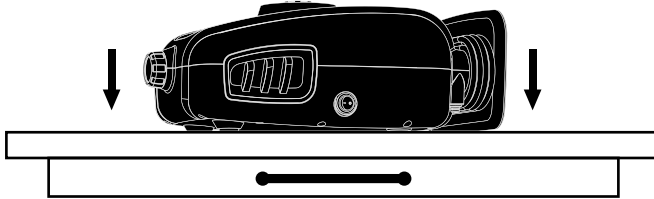

3. Make sure On/Off Switch is turned to “Off” and grounded power cord is unplugged from electrical outlet.

**NOTE: This unit features a continuous-fill Water Reservoir. It does not require any cool down period before refilling.**

4. Unscrew and remove Water Tank Cap.
5. Using the Fill Cup, fill the unit with 42 oz (1,242 ml) of water.

**NOTE: In order to significantly reduce mineral build-up and prolong the life of your Portable Power Steam Cleaner, use of distilled or de-mineralized water in the unit is highly recommended. Refer to Page 13 for more information about mineral build-up.**

6. Replace Water Tank Cap, ensuring that it is screwed on tightly.
7. Place unit back in upright position.

## GENERAL OPERATION

**NOTE: Be sure that Water Reservoir has been filled and that all desired accessories are connected before following these steps.**

1. For first time use, remove protective plastic cover from electrical plug. Plug power cord into a electrical outlet.
2. Switch On/Off Switch to “On” position. Within 30 seconds, the Steam Ready Light will illuminate green indicating the unit is ready for use.

**NOTE: For first time use or after a prolonged storage time, there may be a slight delay for steam due to a dry Water Treatment Cartridge.**

3. Direct Nozzle (and any connected accessory) towards surface you desire to steam, and press Steam Trigger. To sanitize surfaces, point Nozzle, press Trigger and hold approximately 1/2 inch from surface for at least 5 seconds. This will insure that you have killed germs and bacteria.

**CAUTION: Always be sure that Nozzle and any accessory are pointed in a safe direction (away from yourself, other people, pets, and plants) before pressing Steam Trigger.**

4. Keep Steam Trigger pressed for a continuous flow of steam. You may also hold the Steam Trigger, then push the Steam Trigger Lock to lock it down. This will allow a continuous flow of steam without need of holding the Steam Trigger down manually. Steam output can be adjusted by simply turning the Steam Adjustment Knob.
5. Using a back-and-forth motion over the area you are steaming will further enhance the cleaning process. Wipe steamed areas with a clean cloth to remove loosened dirt and grime. Wiping the area while it is still wet is recommended, but use caution when wiping surfaces such as metal that may still be hot.
6. Once steaming tasks are complete, turn the unit “Off” and unplug. Follow steps under Proper Storage procedure on Page 13 of this manual.

## PROPER STORAGE

Preparing your Portable Power Steam Cleaner for storage is quick and simple. When you have finished your steaming tasks, follow the steps listed below.

1. Turn unit “Off” and unplug power cord.
2. Press and hold Steam Trigger to release all remaining steam.
3. Allow unit to completely cool (at least 30 minutes).
4. Remove all accessories from unit.
5. Carefully remove Water Tank Cap.
6. Drain any remaining water from Water Reservoir into a sink or tub – this will help to minimize mineral build-up and prevent over-filling during your next use.
7. Wrap power cord around Cord wrap. Store Portable Power Steam Cleaner in a cool, dry location.

## MINERAL BUILD-UP

A common maintenance need for steam appliances is the removal of build-up caused by high mineral content in many municipal water supplies. This mineral build-up may limit the effectiveness and reduce the life of your Portable Power Steam Cleaner.

The best way to minimize mineral build-up is to use distilled or de-mineralized water when using your Portable Power Steam Cleaner. If you are unable to use distilled water, it is recommended that the following procedure be followed monthly to remove any mineral build-up:

1. Turn unit “Off” and unplug power cord.
2. Remove all accessories from unit.
3. Carefully remove Water Tank Cap.
4. Drain water from Water Reservoir into a sink or tub.
5. Slowly pour 8 oz of vinegar into Water Reservoir.
6. Replace Water Tank Cap, ensuring that it is screwed on tight.
7. Plug unit in, turn On and run unit until vinegar has been steamed out of the system.
8. Rinse Water Reservoir with fresh water, drain and repeat until vinegar odor dissipates.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit fails to heat up.	Unit is not plugged in.	Plug power cord into electrical outlet.
	Household circuit breaker / ground fault interrupter has tripped or blown a fuse.	Reset circuit breaker / ground fault interrupter, or replace fuse. If you need assistance, contact a licensed electrician.
	Unit is damaged or otherwise in need of repair.	Immediately cease usage and unplug. Contact Consumer Service for further assistance (see Page 16 for details).
	Water Reservoir is empty.	Refer to <b>Filling Water Reservoir</b> procedure on Page 11.
	Mineral build-up in unit.	Refer to <b>Mineral Build-up</b> section on Page 13 for cleaning procedure.
Steam output is weak or intermittent.	Water level in Water Reservoir is running out.	Refer to <b>Filling Water Reservoir</b> procedure on Page 11.
	Mineral build-up in unit.	Refer to <b>Mineral Build-up</b> section on Page 13 for cleaning procedure.
Excessive amount of water in steam. <b>NOTE: Unit produces wet steam – it is normal for steam to contain some amount of water.</b>	Water condensation in Steam Hose.	Point nozzle towards sink, tub or ground and shake while pressing Steam Trigger. Continue until excess water is released.
Accessories do not stay firmly connected to Steam nozzle.	Accessories not properly installed.	Check to make sure that accessories are properly connected, per procedures on Pages 8-10.
No steam but can hear pump.	Water Treatment Cartridge is dry.	Allow pump to prime water through it.
		Allow Water Treatment Cartridge to soak in water for one minute before installing into unit.



Refer to the part numbers below when ordering parts and accessories for your Portable Power Steam Cleaner.

**Replacement Accessories**

Part Numbers for Fast Reordering at [www.mccullochsteam.com](http://www.mccullochsteam.com)

Jet Nozzle	A1230-001
Triangle Brush	A1230-002
Large Brush	A1230-003
Nylon Utility Brush - 5 Pack	A1230-005-5
Brass Utility Brush - 5 Pack	A1230-006-5
Round Brush - 5 Pack	A1350-001-5
Round Scrub Pad - 5 Pack	A1230-007-5
Fill Cup	A275-015
Scraper	A1230-009
Storage Bag	A1230-010
Squeegee with Scrubbing Brush	A1350-002
Removable Backpack	A1350-003
Water Treatment Cartridge - 2 Pack	A1350-004-2

**Replacement Parts**

Available via Consumer Service at 1-800-711-6617

Water Reservoir Cap	T1350-001
---------------------	-----------



## CONSUMER SERVICES

For problems with your Portable Power Steam Cleaner, please refer to the Troubleshooting guide located on Page 14 of this manual. Additional inquiries should be directed to our consumer support services through our website, [www.mccullochsteam.com](http://www.mccullochsteam.com).

If you do not have internet access, you may also contact our Consumer Service Department by telephone, at 1-800-711-6617.

**NOTE: In order for our Consumer Service representatives to help you as quickly and efficiently as possible, please have the following information ready before calling:**

- Purchase information (where and when you purchased this product)
- Copy of purchase receipt / proof of purchase
- Product serial number (located on electrical specification label on back of unit)
- Date code (4-digit number located on electrical specification label)

### PRODUCT SPECIFICATIONS

MODEL	MC1350
VOLTAGE	120V
POWER	1200W
WATER CAPACITY	42 oz. (1,242 ml)
HEATING TIME	30 sec. (approximate)
CONTINUOUS STEAM TIME	30 min high, 50 min low (approximate)
UNIT WEIGHT	6 lbs. (2.7 kg.)
UNIT DIMENSIONS	6.6" x 8.75" x 15.88" (16.7 cm x 22.2 cm x 40.3 cm)



## 1-YEAR LIMITED WARRANTY

### What is covered

Manufactured by Vornado Air, LLC, under license from Husqvarna AB (publ). Subject to the terms and conditions of this 1-Year Limited Warranty ("Warranty") as set forth below, Vornado warrants to the original consumer or purchaser ("Buyer") that this McCulloch®-branded steam product, excluding all accessories and attachments, (the "Product") is to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when used and maintained in accordance with the Owner's Guide (the "Warranty Period").

In the event Buyer notifies Vornado of a defect in the Product within the Warranty Period, Vornado will replace the Product and/or defective component parts, as applicable and necessary. Any such replacement will be made at no charge to Buyer for parts or labor, provided that Buyer shall be responsible for all shipping and transportation costs associated with returning the Product to Vornado for inspection and covered replacement.

### What is not covered

This Warranty shall not be applicable to damage or loss caused in whole or in part by:

- Repairs, modifications or alterations to the Product by anyone other than Vornado.
- Use or operation of the Product outside the permitted or intended uses described by Vornado in the Owner's Guide, or other careless operation, handling, misuse, or abuse of the Product.
- Lack of proper maintenance or timely cleaning of the Product as specified in the Owner's Guide.
- Use of the Product other than for normal household purposes.





- Normal wear and tear.
- Used consumable parts, accessories and attachments, including, but not limited to, brushes, hangers, scrub pads and mop pads.
- Use of parts and accessories other than those produced or recommended by Vornado.
- Cosmetic damage, such as scratches, nicks and dents.
- Damage caused by accident, water, flood, fire or other acts of nature or external causes.

**Warranty limitations and exclusions**

- NO OTHER EXPRESS WARRANTY IS GIVEN BY VORNADO TO BUYER AND NO REPRESENTATIVE HAS THE AUTHORITY TO MAKE REPRESENTATIONS OTHER THAN THOSE PROVIDED HEREIN.
- THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF AND ALL IMPLIED WARRANTIES, SPECIFICALLY THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY LIMITED TO THE DURATION OF THE WARRANTY PERIOD, UNLESS A SHORTER PERIOD IS PERMITTED BY LAW.
- VORNADO'S REPLACEMENT OF THE PRODUCT IS THE EXCLUSIVE REMEDY. UNDER NO CIRCUMSTANCES SHALL VORNADO BE LIABLE TO BUYER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL, OR OTHER DAMAGES, EVEN IF VORNADO HAS BEEN ADVISED OF OR COULD REASONABLY FORESEE THE POSSIBILITY OF SUCH DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR DAMAGE, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT OR UNDER ANY OTHER THEORY OF LAW.
- THIS WARRANTY GIVES BUYER SPECIFIC LEGAL RIGHTS. BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE-TO-STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO BUYER.

**How do you register the Warranty**

Buyer must complete an application to register this Warranty within sixty (60) days following date of purchase. Buyer may either visit Vornado's website at [www.mccullochsteam.com](http://www.mccullochsteam.com) and complete an online application or mail a completed application to Vornado. Failure to register this Warranty within sixty (60) days following date of purchase will render this Warranty null and void.

**Warranty service**

For warranty service, call 1-800-711-6617 or email [consumerservice@mccullochsteam.com](mailto:consumerservice@mccullochsteam.com) to obtain a Return Authorization ("RA") form. Include the Product model number and serial number, as well as Buyer's name, address, city, state, zip code and phone number when contacting Vornado for warranty service. Buyer may be required to provide the original sales receipt for purposes of verifying date of purchase. After receiving the RA form, the Product must be shipped, postage prepaid by Buyer, to:

Vornado Air, LLC  
Attn: Warranty & Repair  
415 E. 13th Street  
Andover, KS 67002

To assure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock.

Important: After receiving return authorization, carefully pack the Product to avoid damage in shipping. Damage in shipping is not covered by the Warranty and shall be the sole responsibility of Buyer. Damage or loss not covered by this Warranty or occurring outside the Warranty Period will require a fee to cover the cost of handling and shipping. All such fees and costs shall be the sole responsibility of Buyer.

Please allow at least 1-2 weeks for return of the Product after it is received by Vornado. For ease of recordkeeping, it is recommended that Buyer staple or attached the original sales receipt to this Owner's Guide and record the Product serial number (located on the Product specifications decal) here:

---

© 2024 Vornado Air, LLC • Andover, KS 67002

Specifications subject to change without notice. Manufactured by Vornado Air, LLC, under license from Husqvarna AB (publ). Manufactured in China.

Vornado Consumer Service W: [www.mccullochsteam.com](http://www.mccullochsteam.com) • P: 1-800-711-6617 •

E: [consumerservice@mccullochsteam.com](mailto:consumerservice@mccullochsteam.com)



review this product online

[www.mccullochsteam.com/reviews](http://www.mccullochsteam.com/reviews)

Manufactured by Vornado Air LLC under license from Husqvarna AB (publ).

For more information on other McCulloch products,  
visit [www.mcculloch.com](http://www.mcculloch.com)

For questions, or comments or warranty information,  
call 1-800-711-6617 or visit [www.mccullochsteam.com](http://www.mccullochsteam.com)